

LIFT-U[®]

A DIVISION OF HOGAN MFG., INC.



ACCESSOR II PREVENTATIVE MAINTENANCE SCHEDULE

DAILY	6 WEEKS	6 MONTHS	OTHER	MANUAL SECTION REF.	<i>Accessor II LIFT</i> PREVENTIVE MAINTENANCE SCHEDULE
					ITEM DESCRIPTION (manual sectional references where applicable)
X					CYCLE LIFT
		X		VISUAL	INSPECT ELECTRIC POWER SOURCE: A – MOUNTING BOLTS.
		X		VISUAL	B – ELECTRICAL CONNECTIONS
		X			INSPECT MACHINE POWER SCREW
		X		VISUAL	A – STRUCTURAL INTERGRITY
		X		VISUAL	B – MOUNTING BOLTS
		X		S3 - 1	G – LUBRICATION 1 –MACHINE SCREW JACK COLUMN (LUBE WITH ACME SCREW LUBRICANT)
		X		VISUAL	INSPECT HYDRAULIC DAMPER FOR LEAKAGE A – REPLACE IF DAMPER HAS LEAKED FLUID
		X		VISUAL	INSPECT LIMIT SWITCHES: A – DAMAGE TO LIMIT SWITCH LEVEL ARM
		X		VISUAL	B – ALIGNMENT OF LIMIT SWITCH LEVER ARM TO TARGET
		X		VISUAL	INSPECT GEAR MOTOR: A – MOUNTING BOLTS
		X		VISUAL	B – GEAR MOTOR TORQUE ARM’S MOUNT TO MECHANISM ASSEMBLY
		X		VISUAL	C – INTEGRITY OF CLAMPING COLLAR CONNECTING MOTOR TO POWER SCREW
		X		VISUAL	INSPECT BEARINGS: A – STRUCTURAL INTERGRITY OF BEARINGS
		X		VISUAL	B – MOUNTING BOLTS
	X			VISUAL	INSPECT DOOR: (INCLUDING DUTCH DOOR/STEP IF EQUIPPED) A – STRUCTURAL INTERGRITY OF DOOR
	X			VISUAL	B – HINGE AND LATCHING POINT FOR WEAR
		X		VISUAL	C – AUTOMATIC DOOR ACTUATOR ATTACHMENT BOLTS (NOT EQUIPPED ON ALL MODELS)
		X		VISUAL	INSPECT ROLL-UP BARRIER: (NOT EQUIPPED ON ALL MODELS) A – RUST / CORROSION
		X		VISUAL	B – BINDING
		X		VISUAL	C – DAMAGE
		X		S2 – 8	MANUAL OPERATION OF LIFT: A – LIFT UP
		X		S2 – 8	B – LIFT DOWN
		X		S3 – 2	INSPECT LIFT MOUNTING BOLTS – REFERENCE BUILDING CODE TORQUE SPECIFICATIONS
		X		S3 – 2	INSPECT ALL FASTENERS FOR TORQUE
		X		VISUAL	INSPECT FOR “OPERATING PROCEDURE DECAL”