

# LIFT-U<sup>®</sup>

A DIVISION OF HOGAN MFG., INC.



---

## ACCESSOR II PREVENTATIVE MAINTENANCE SCHEDULE

---

DAILY	6 WEEKS	6 MONTHS	OTHER	MANUAL SECTION REF.	<i>Accessor II LIFT</i> <b>PREVENTIVE MAINTENANCE SCHEDULE</b>
					ITEM DESCRIPTION (manual sectional references where applicable)
X					<b>CYCLE LIFT</b>
		X X		<b>VISUAL</b> <b>VISUAL</b>	<b>INSPECT ELECTRIC POWER SOURCE:</b> A – MOUNTING BOLTS. B – ELECTRICAL CONNECTIONS
		X X X		<b>VISUAL</b> <b>VISUAL</b> <b>S3 - 1</b>	<b>INSPECT MACHINE POWER SCREW</b> A – STRUCTURAL INTERGRITY B – MOUNTING BOLTS G – LUBRICATION I – MACHINE SCREW JACK COLUMN (LUBE WITH ACME SCREW LUBRICANT)
		X		<b>VISUAL</b>	<b>INSPECT HYDRAULIC DAMPER FOR LEAKAGE</b> A – REPLACE IF DAMPER HAS LEAKED FLUID
		X X		<b>VISUAL</b> <b>VISUAL</b>	<b>INSPECT LIMIT SWITCHES:</b> A – DAMAGE TO LIMIT SWITCH LEVEL ARM B – ALIGNMENT OF LIMIT SWITCH LEVER ARM TO TARGET
		X X X		<b>VISUAL</b> <b>VISUAL</b> <b>VISUAL</b>	<b>INSPECT GEAR MOTOR:</b> A – MOUNTING BOLTS B – GEAR MOTOR TORQUE ARM’S MOUNT TO MECHANISM ASSEMBLY C – INTEGRITY OF CLAMPING COLLAR CONNECTING MOTOR TO POWER SCREW
		X X		<b>VISUAL</b> <b>VISUAL</b>	<b>INSPECT BEARINGS:</b> A – STRUCTURAL INTERGRITY OF BEARINGS B – MOUNTING BOLTS
	X X	X		<b>VISUAL</b> <b>VISUAL</b> <b>VISUAL</b>	<b>INSPECT DOOR: (INCLUDING DUTCH DOOR/STEP IF EQUIPPED)</b> A – STRUCTURAL INTERGRITY OF DOOR B – HINGE AND LATCHING POINT FOR WEAR C – AUTOMATIC DOOR ACTUATOR ATTACHMENT BOLTS (NOT EQUIPPED ON ALL MODELS)
		X X X		<b>VISUAL</b> <b>VISUAL</b> <b>VISUAL</b>	<b>INSPECT ROLL-UP BARRIER: (NOT EQUIPPED ON ALL MODELS)</b> A – RUST / CORROSION B – BINDING C – DAMAGE
		X X		<b>S2 – 8</b> <b>S2 – 8</b>	<b>MANUAL OPERATION OF LIFT:</b> A – LIFT UP B – LIFT DOWN
		X		<b>S3 – 2</b>	<b>INSPECT LIFT MOUNTING BOLTS – REFERENCE BUILDING CODE TORQUE SPECIFICATIONS</b>
		X		<b>S3 – 2</b>	<b>INSPECT ALL FASTENERS FOR TORQUE</b>
		X		<b>VISUAL</b>	<b>INSPECT FOR “OPERATING PROCEDURE DECAL”</b>